


FUSE & FLASHER LOCATIONS

1986 Isuzu Trooper II

1986 FUSE BLOCKS, FLASHERS & RELAYS
ISUZU

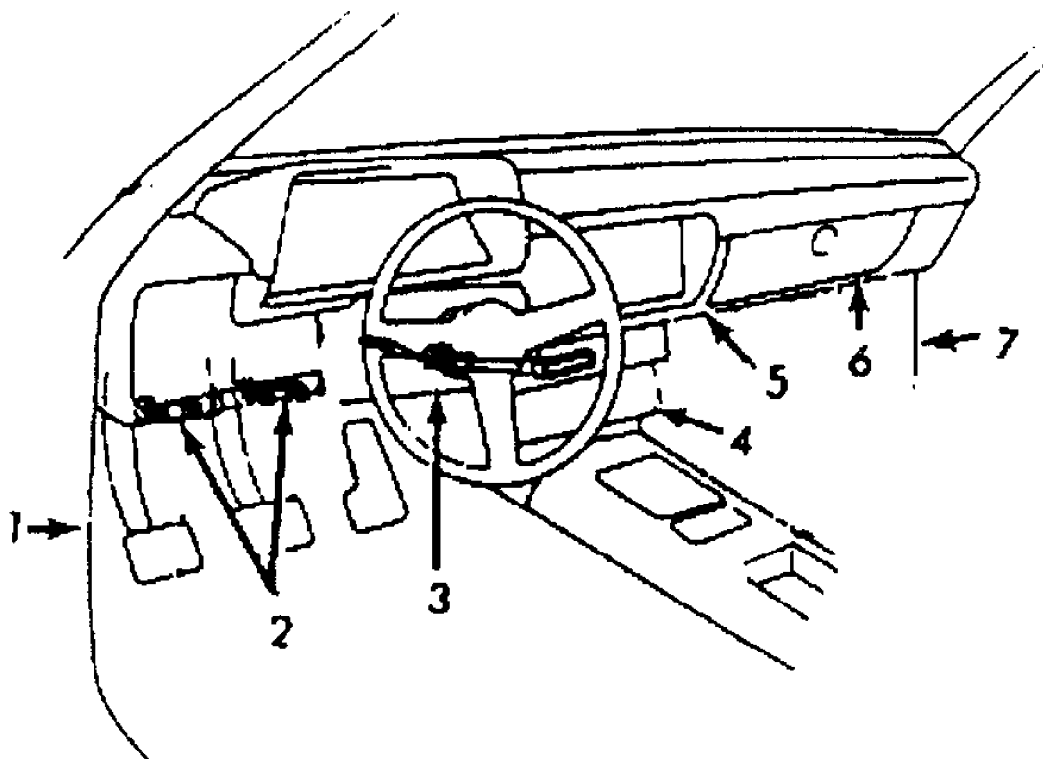

Locations 1-7 are as shown.

Locations 8-16 are as follows:

- 8 - Left Front Engine Compartment
- 9 - Right Front Engine Compartment
- 10 - Left Rear Engine Compartment
- 11 - Right Rear Engine Compartment
- 12 - Left Rear Taillight Area
- 13 - Right Rear Taillight Area
- 14 - Under Passenger Seat
- 15 - Under Rear Seat
- 16 - Right Side "B" Pillar

29511

Fig. 1: Fuses & Flasher Locations

FUSE BLOCKS, FLASHERS & RELAYS

Manufacturer & Model

Component Location in Fig. 1

Isuzu

I-Mark

Fuse Locations	(2)
Flasher Locations	(2)
Relay Locations	
Automatic Choke, Door Ajar, Heater,	
Seat Belt Buzzer, Turn Signal/Hazard	(2)
A/C Fan, A/C Power	(5)
Shift Reminder	(6)
Charging System Warning, Dimmer, EFE Heater,	
Glow Plug (2 Relays) Lighting, Starter,	
Taillight, Rear Defrost	(8)
Stoplight Failure	(12)

Impulse

Fuse Locations	(2), (9)
Flasher Locations	(2)
Relay Locations	
Overdrive, Seat Belt Timer	(2)
A/C Relay	(5)
Charge Warning, Dimmer, Headlight Cover,	
Horn, Lighting, Starting System,	
Taillights, Wiper/Washer (2 Relays)	(9)

P'UP & Troop II

Fuse Locations	(10)
Flasher Locations	(2)
Relay Locations	
A/C-Heater, Turn Signal/Hazard	(2)
Charge Warning, EFE Heater, Lighting, Starter	(8)
Rear Defogger	(6)
Fuel Pump	(10)
Glow Plug	(11)
