



SERVICE INDICATOR & WARNING LIGHTS

1986 Isuzu Trooper II

1984-92 MAINTENANCE
Isuzu Service Indicator & Warning Lights

Trooper, Trooper II

SERVICE INDICATOR & WARNING LIGHTS

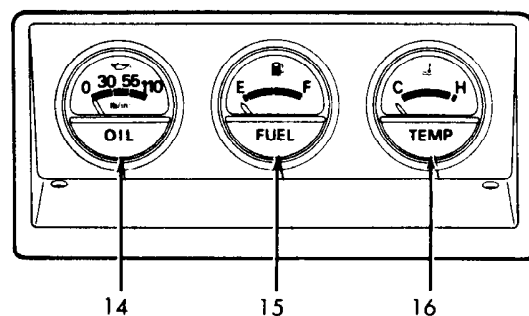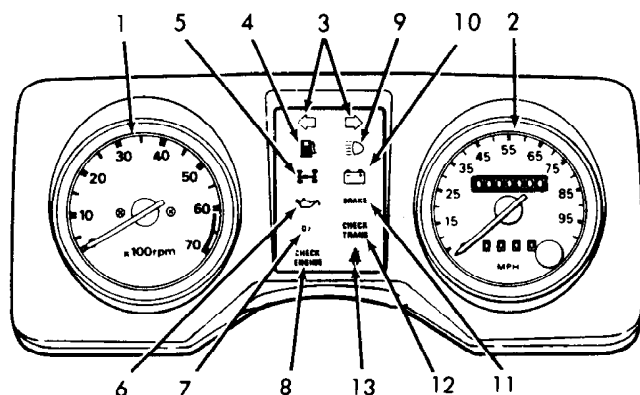

1. Tachometer
2. Speedometer
3. Turn Signal Indicators
4. Low Fuel Warning Light
5. 4WD Indicator
6. Oil Pressure Warning Light
7. O₂ Sensor Indicator Light
8. CHECK ENGINE Warning Light
9. High Beam Indicator Light
10. Charging System Warning Light
11. BRAKE Warning Light

12. CHECK TRANS Or A/T OIL TEMP Light
13. Seat Belt Warning Light
14. Oil Pressure Gauge
15. Fuel Gauge
16. Coolant Temperature Gauge
17. Voltmeter
18. Upshift Indicator Light (M/T Only)
19. "ABS/Rr" ABS (Rear Wheel) Warning Light (If Equipped)
20. Odometer
21. Trip Odometer
22. Trip Odometer Reset Button

90G04850

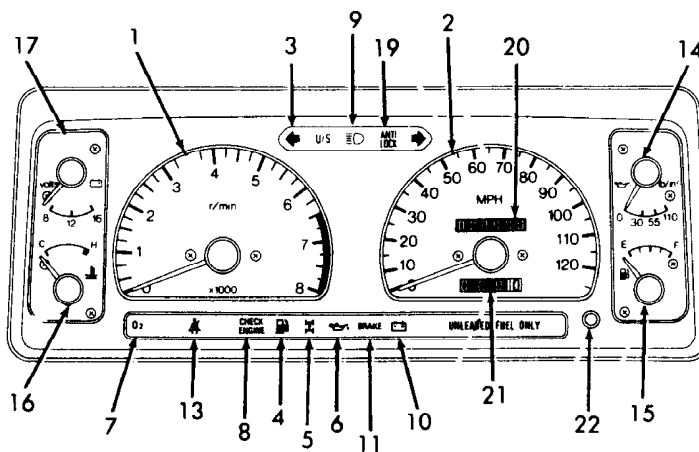


Fig. 1: Dash Gauges & Warning Lights
Courtesy of Isuzu Motor Co.

COOLANT TEMPERATURE GAUGE

Pointer should remain in the center (White) band. If gauge registers at the "H" end, stop vehicle immediately and let engine cool. Check engine coolant level.

OIL PRESSURE GAUGE

Pointer should remain in the White range. If gauge registers too high or too low and will not increase when the engine speed is increased, stop the vehicle immediately, and check the oil level after approximately 5 minutes. If oil level is normal, have lubricating system serviced as soon as possible.

OIL PRESSURE WARNING LIGHT

If light glows during operation, oil level is low or there is low oil pressure. If this occurs, stop the vehicle immediately and check oil level. If oil level is normal, have the lubricating system serviced as soon as possible.

ANTI-LOCK BRAKE SYSTEM WARNING LIGHT

Light is designed to monitor the readiness of the anti-lock or rear anti-lock feature on vehicles equipped with the optional anti-lock brake system. Light will come on briefly as a bulb check when the engine is started. If light does not come on initially, or stays on during vehicle operation, have the system serviced.

UPSHIFT INDICATOR (M/T ONLY)

Upshift indicator ("U/S") light will come on to indicate that you can get better fuel economy by shifting to the next higher gear. Best fuel economy can be achieved by accelerating slowly and shifting to the next higher gear when the "U/S" light comes on.

4WD INDICATOR

Light is illuminated when transfer lever is set in the 4H or 4L position.

CHARGING SYSTEM WARNING LIGHT

Light indicates a problem with the electrical charging system. If light comes on while driving, stop vehicle and check alternator belt. If belt has proper tension and light remains on, have system serviced as soon as possible.

"BRAKE" WARNING LIGHT

If this light comes on while driving, it indicates that either the parking brake is on or the brake fluid level is low. This light may also indicate a critically low vacuum level on diesel-powered vehicles.

"CHECK ENGINE" WARNING LIGHT (GASOLINE ENGINES ONLY)

If light comes on and remains on while driving, it indicates a possible malfunction in the engine emission system. Have the system serviced as soon as possible.

CHECK TRANS OR A/T OIL TEMP WARNING LIGHT

Indicator should illuminate briefly as a bulb check when ignition key is turned to ON position. If light comes on during vehicle operation, automatic transmission fluid temperature is too

high. Stop vehicle and put selector lever in Park position. With engine idling, wait until light goes off to continue driving. If light does not go off, have system serviced as soon as possible.

OXYGEN SENSOR INDICATOR (2.6L ENGINE ONLY)

If light comes on and remains on while driving, it indicates that the oxygen sensor is in need of replacement.

FUEL FILTER WARNING LIGHT (DIESEL ENGINES ONLY)

Indicates the need to drain the water separator. If light comes on and remains on while driving, drain the water separator immediately.