


2




**Starter operates but engine does not start**

Check that hoses on the intake side are free from damage and are connected properly, intake manifold is not loose, gaskets are free from damage which permits air to be drawn into engine, and that oil filler cap and oil level gauge rods are installed properly

Check to see if a spark occurs at end of high-tension cable from ignition coil when engine is turned over by starter

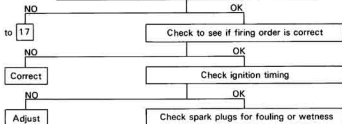

NO → Start engine with spark plugs replaced

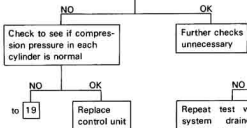

OK → Check fuel pressure

