


Engine Compartment Relay and Fuse Box

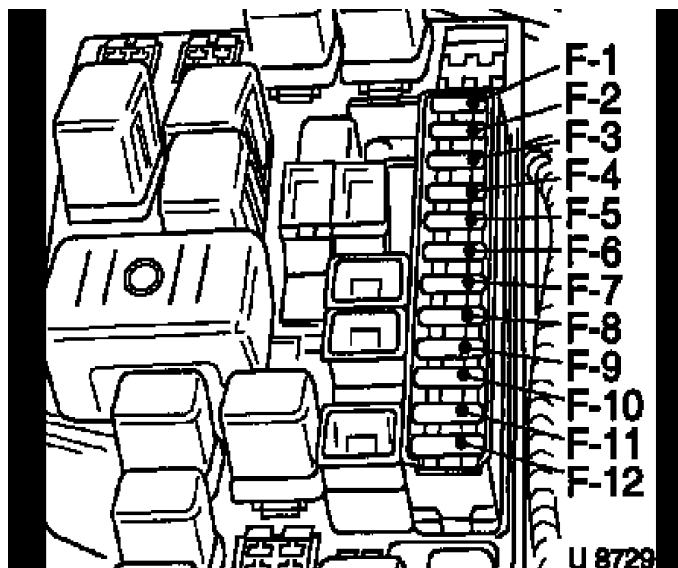



Fuse	Amp	Circuit
F-1	-	Unoccupied.
F-2	10	Oxygen sensor (petrol engine).
F-3	7.5	Up to MY 96: Air conditioning. Diesel engine: Ceramic heater relay. Quick warming up system.
	15	As of MY 96: Horn. Hazard warning system. Anti-theft alarm system.
F-4	10	LHD (except Norway and as of MY 96 Finland); headlamp main beam, left.
	15	RHD and Norway and as of MY 96 Finland: Headlamp main and dipped beams, left. Dim-dip relay and resistor (up to MY 93 Great Britain).
F-5	10	LHD (except Norway and as of MY 96 Finland); headlamp main beam, right.
	15	RHD and Norway and as of MY 96 Finland: Headlamp main and dipped beams, right. Dim-dip relay and resistor (up to MY 93 Great Britain).

Fuse	Amp	Circuit
F-6	10	LHD (except Norway and as of MY 96 Finland): headlamp dipped beam, left.


	-	RHD and Norway and as of MY 96 Finland: unoccupied.
F-7	10	LHD (except Norway and as of MY 96 Finland): headlamp dipped beam, right.
	-	RHD and Norway and as of MY 96 Finland: unoccupied.
F-8	15	Up to MY 92: front fog lamps and fog tail lamps.
	20	As of MY 93: front fog lamps and fog tail lamps.
F-9	20	Anti-lock brake system.
F-10	15	Petrol engine: fuel pump.

Fuse	Amp	Circuit
F-11	10	Up to MY 96 (except Norway): Tail and side marker lamps, left. Licence plate lamps. Illumination for glove box, cigarette lighter, switches and controls.
	15	Up to MY 96 Norway: Tail and side marker lamps, both. Licence plate lamps. Illumination for glove box, cigarette lighter, switches and controls.
	10	As of MY 96 LHD (except Norway and Finland): Tail and side marker lamps, left. Licence plate lamps.
	-	As of MY 96 RHD and Norway and Finland; unoccupied.
	10	Up to MY 96 (except Norway): tail and side marker lamps, right.
	-	Up to MY 96 Norway: unoccupied.
F-12	10	As of MY 96 LHD (except Norway and Finland): Tail and side marker lamps, right. Illumination for glove box, cigarette lighter, ashtray, switches and controls.
	10	As of MY 96 Norway and Finland: Tail and side marker lamps, both. Licence plate lamps. Illumination for glove box, cigarette lighter, ashtray, switches and controls.
	15	As of MY 96 RHD: circuits as for Norway and Finland.

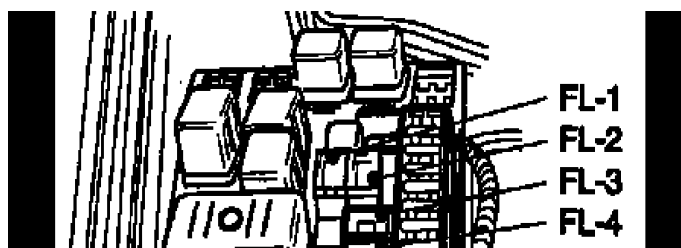


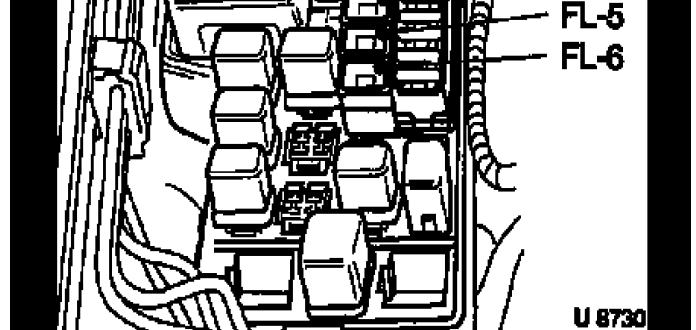


Fusible link	Amp	Circuit
FL-1	80	Main circuits
FL-2	50	Starter and ignition switch. Starter relay.
FL-3	30	Petrol engine: engine control module.
	40	Diesel engine: ceramic heater.
FL-4	-	Up to MY 96: unoccupied.
	30	As of MY 96: condenser fan.
FL-5	50	Diesel engine: glow plugs.
FL-6	40	Anti-lock braking system.

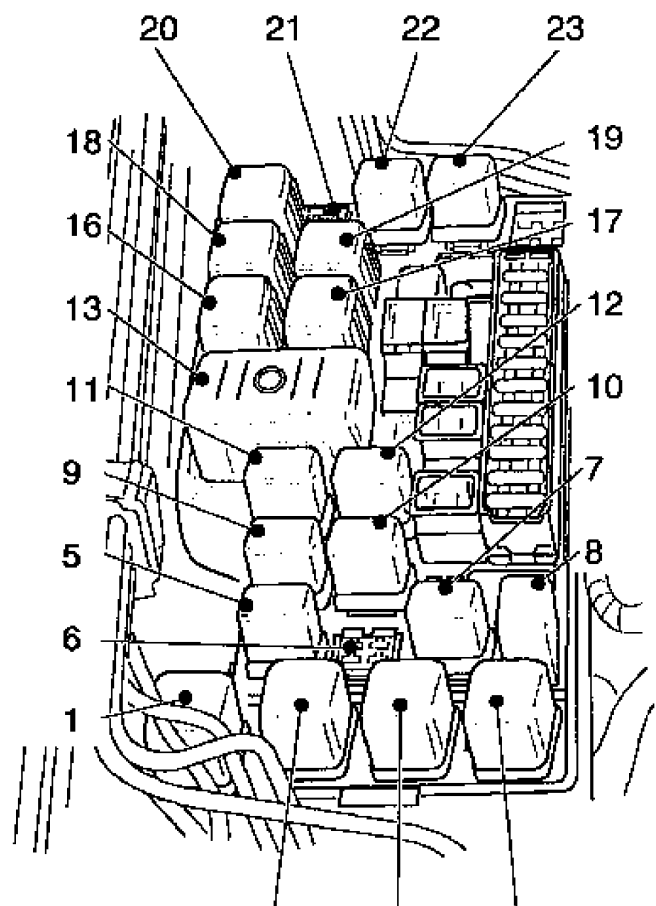

Ref. No.	Relay connector	Circuit
1	K157	Lighting.
2	X-2 K127	LHD up to MY 93 Great Britain: dimmer. As of MY 96 Norway and Finland: running light-2. RHD: unoccupied.
3	K73 K155	LHD: dimmer. Up to MY 93 Great Britain: dim-dip resistor. As of MY 96 Norway and Finland: running light-1. RHD: unoccupied
4	K124 K163	LHD up to MY 96 and RHD up to MY 93: tail lamps. LHD Norway and Finland: tail lamps-2
5	K60	Air conditioning thermostat.
6		Unoccupied.
7	K149	Petrol engine: air conditioning compressor.
8	K18	Horn.
9	K6 K153 K162 K163	Up to MY 96: air conditioning LHD as of MY 96 (except Norway and Finland): tail lamps. Norway and Finland: tail lamps - 1. RHD: tail lamps.
10	K3	Up to MY 96 petrol engine: starter. As of MY 96: unoccupied.
11	K58	Petrol engine: fuel pump.

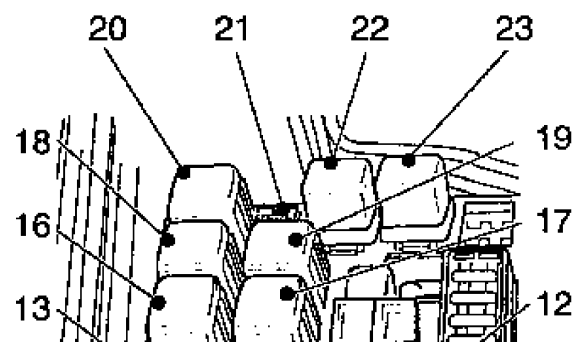


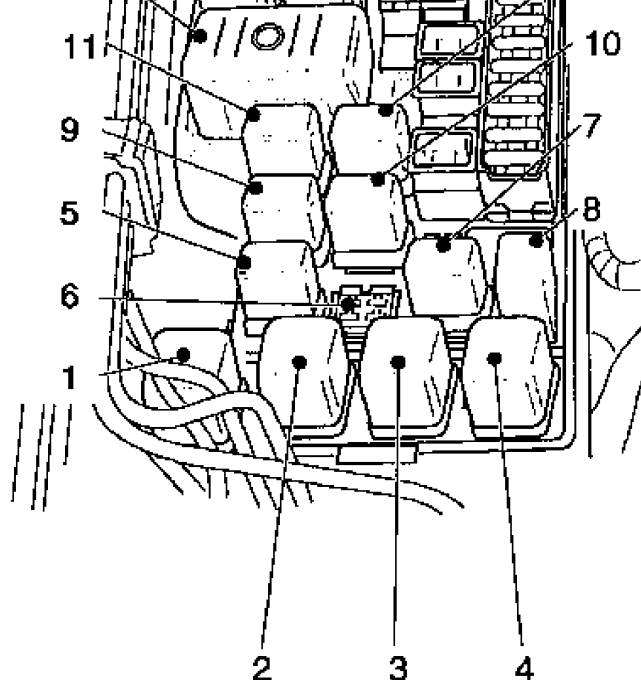

T 0024

Ref. No.	Relay connector	Circuit connector
12	K152 K130	Petrol engine: engine control module. Diesel engine: ceramic heater.
13	K8	Up to MY 97: windscreen wiper intermittent timer.
16	K129	Diesel engine: quick warming up system.
17	K115 K79	Petrol engine: starter. Diesel engine: charge.
18	K164	As of MY 96: shift-on-the-fly.
19	K132 K154	Up to MY 96: lock-up off (automatic transmission). LHD as of MY 96 Norway and Finland: running light cut. RHD as of MY 96: unoccupied.
20	K23	Up to MY 96: cruise control main. As of MY 96: unoccupied.
21		Unoccupied.
22	K89	Fog tail lamp.
23	K5	Front fog lamp.



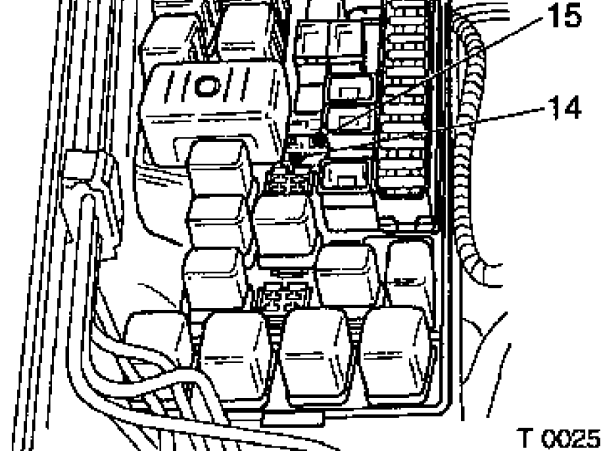

Ref. No.	Diode connector	Circuit
14	V25	<p>Petrol engine:</p> <p>Diode 1 - air conditioning.</p> <p>Diode 2 - as of MY 94: electronic brake control module (reverse light signal on manual transmission).</p> <p>Diesel engine: air conditioning up to MY 97.</p>
15	V38	<p>Petrol engine:</p> <p>Diode 1 - engine control module (automatic transmission).</p> <p>Diode 2 - cruise control up to MY 96, ABS reverse light signal as of MY 97.</p>
	V33	
	V24	<p>Diesel engine:</p> <p>Diode 1 - quick warming up system.</p> <p>Diode 2 - ceramic heater relay up to MY 97.</p>
	V33	<p>ABS reverse light signal as of MY 97.</p>